

Tripod Drinker Instructions

20l, 30l and 40l



How To Fill A Tripod Drinker

1. While the tank and basin are empty, push the rubber stopper completely over the hole in the spout.
2. Unscrew the cap and fill the tank with water.
3. Screw the cap back on. Ensure the cap has a rubber seal inside and is very tight.
4. Push the rubber stopper back up the spout, away from the hole.
5. Wait for the water to find its level.
6. Refill in the same way when the tank is empty, or as needed.

How To Clean A Tripod Drinker

1. Unscrew the cap.
2. Add approx. 500g of pea gravel or similar to the tank
3. Make a solution consisting of 1 litre of water and 10ml of 910018 ETON Appliance Cleaner 1litre or similar (dilution rates may vary- check manufacturers guidelines).
4. Pour the solution into the tank
5. Repeatedly swirl the pea gravel and water/disinfectant solution around the tank in a circular motion. The pea gravel will provide a scrubbing action (the same principle is used in wine decanters).
6. Pour the pea gravel and water/disinfectant solution out of the tank
7. Refill the tank with clean, fresh water only and swirl round the tank 3 times
8. Refill with water up to the desired level and replace the cap with rubber seal

Tripod Feeder Instructions

20kg, 30kg and 40kg

ETON



For cleaning use with:
910018 ETON Appliance Cleaner 1litre



How To Clean A Tripod Feeder

Thorough Cleaning

1. Unscrew the cap.
2. Wipe out any excess food remnants with a clean cloth
3. Add approx. 500g of pea gravel or similar to the tank
4. Make a solution consisting of 1 litre of water and 10ml of 910018 ETON Appliance Cleaner 1litre or similar (dilution rates may vary- check manufacturers guidelines).
5. Pour the solution into the tank
6. Repeatedly swirl the pea gravel and water/disinfectant solution around the tank in a circular motion. The pea gravel will provide a scrubbing action (the same principle is used in wine decanters).
7. Pour the pea gravel and water/disinfectant solution out of the tank
8. Refill the tank with clean, fresh water only and swirl round the tank 3 times
9. Dry the tank thoroughly with a clean, dry cloth
10. Replace the cap

Light Cleaning

1. Unscrew the cap
2. Wipe out any excess food remnants with a clean cloth
3. Make a solution consisting of 1 litre of water and 10ml of 910018 ETON Appliance Cleaner 1litre or similar (dilution rates may vary- check manufacturers guidelines).
4. Submerge a clean cloth into the water and disinfectant solution and wipe around the inside of the tank
5. Dry the tank thoroughly with a clean, dry cloth
6. Replace the cap

© ETON

ETON

Call: 01246 264630
Email: sales@etonlivestockappliances.com